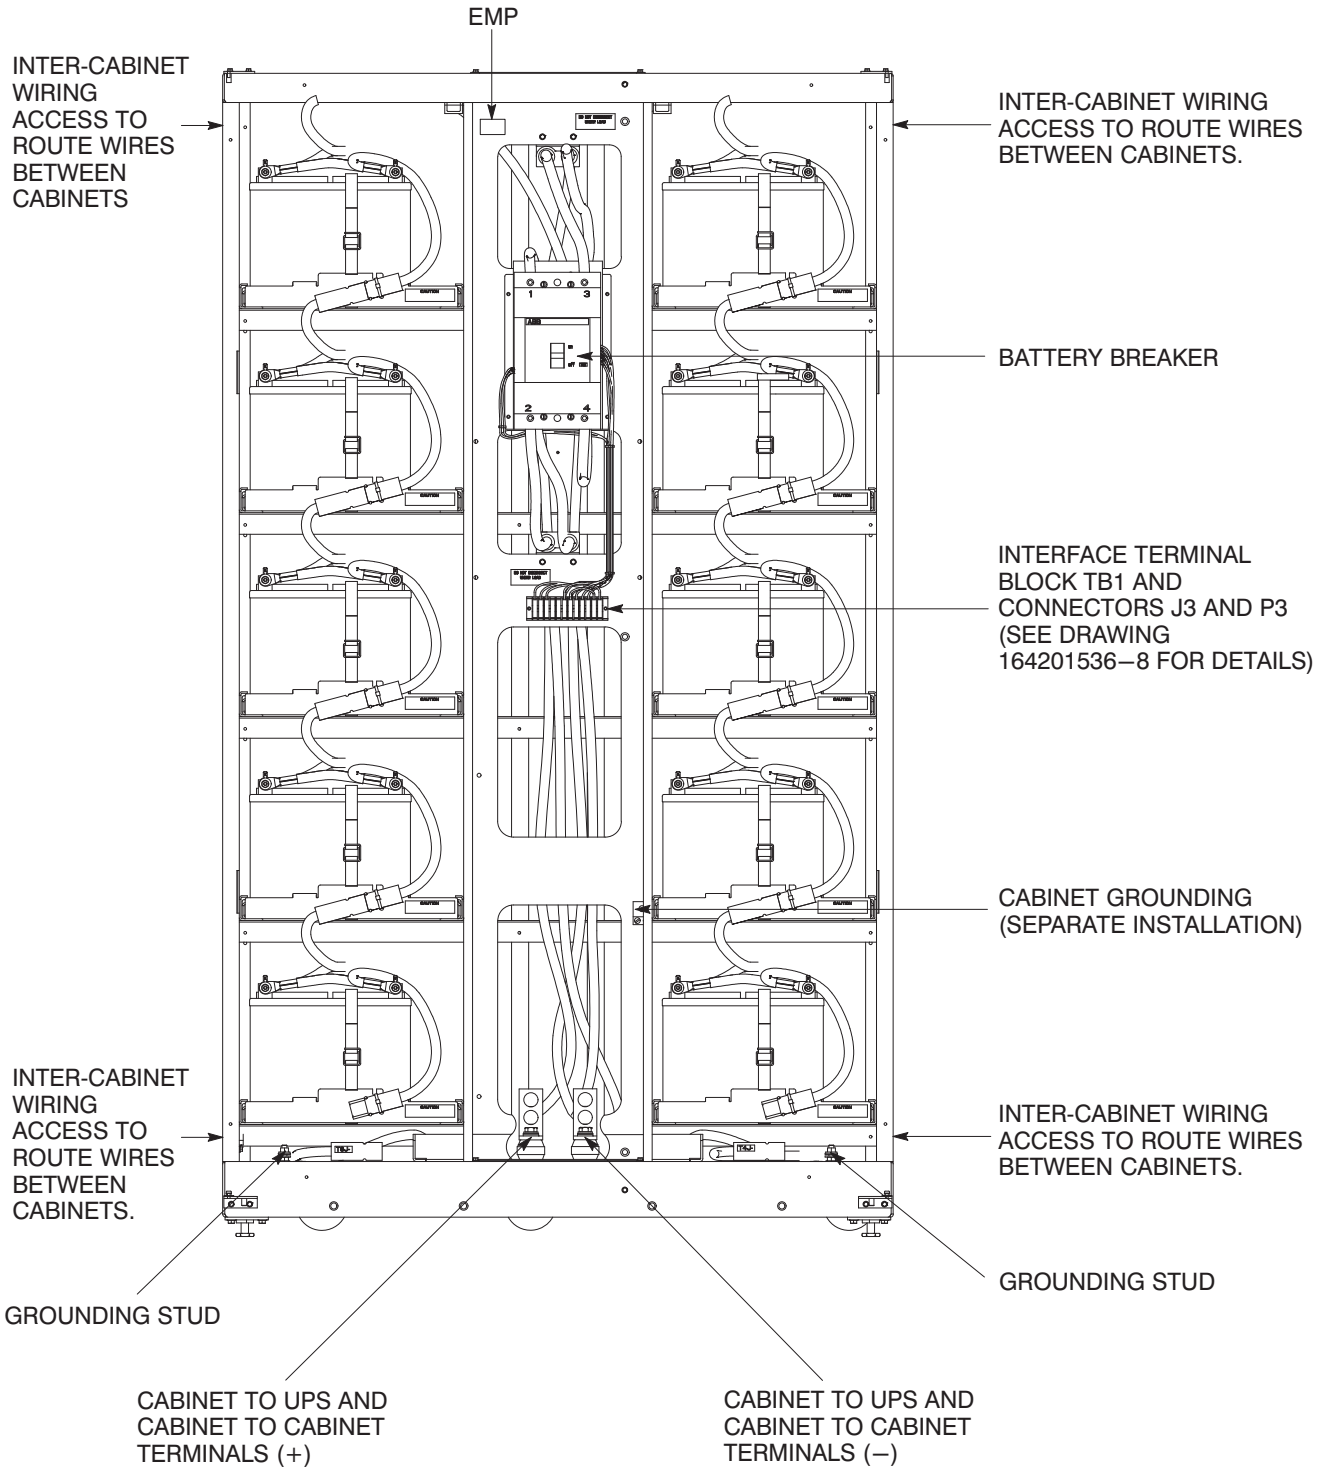

MODEL IBC–L

***NOTE**: Use pressure and bus bar terminations, as necessary, for connecting cables between the UPS and battery cabinet and between battery cabinets.*

DESCRIPTION: **BATTERY POWER AND INTERFACE TERMINAL LOCATIONS**			
DRAWING NO:	164201536–7	*SHEET:*	3 of 3
REVISION:	B	*DATE:*	091504